

INSTALLATION INSTRUCTIONS

Troldtekt® rhomb, installed with screws




These instructions apply to installation of Troldtekt® rhomb with screws on wooden battens or steel profile system. If you install Troldtekt® on wooden battens, the battens should be minimum 22x95 mm. You can download installation instructions for wooden battens from www.troldtekt.com.

INSTALLATION


Fix the panels using Troldtekt screws spaced 25/20 mm from the edges – as indicated in the figure below.

Be careful not to overdrive the washered screws and so cause an indentation in the panel.

PANEL TYPES

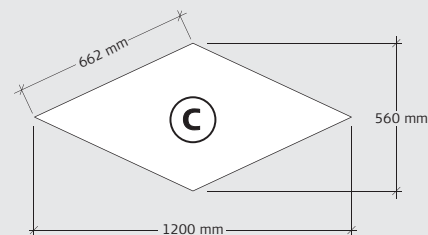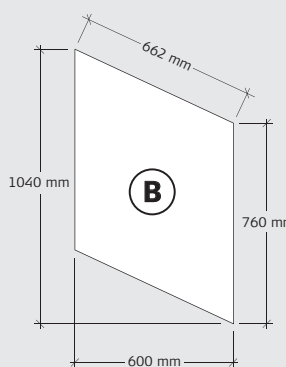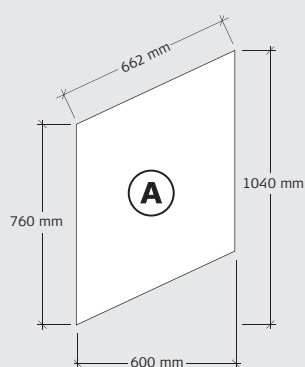

PROFILE DRAWING



K11: With 11 mm bevel

PATTERN


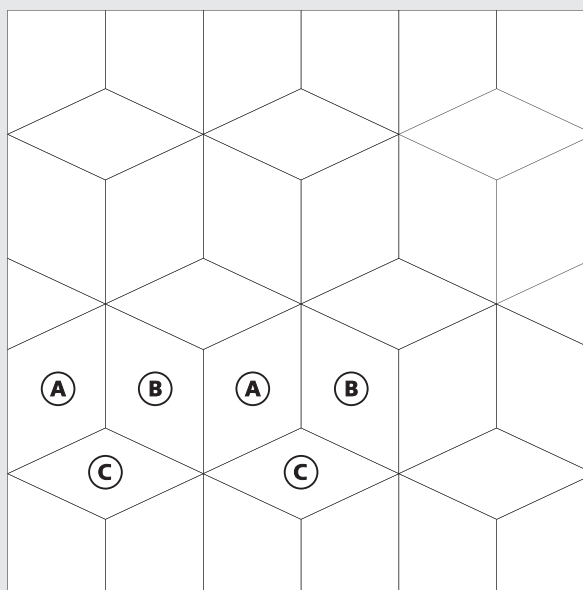



ILLUSTRATION - INSTALLATION

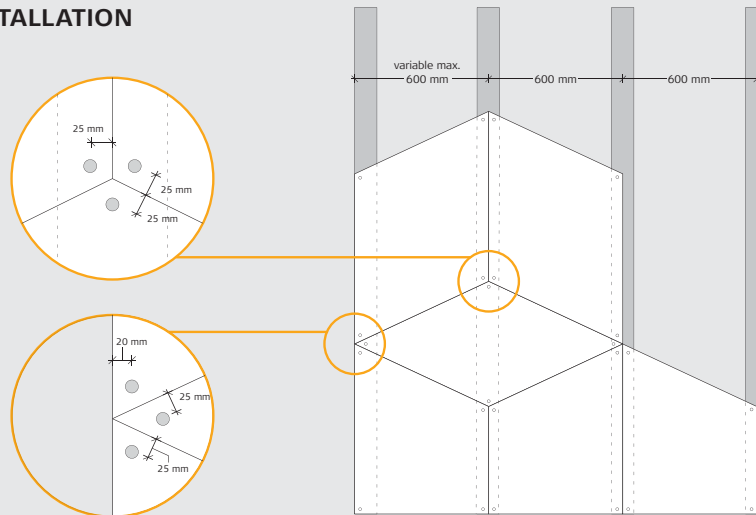

VAPOUR CHECK

If you need to install a vapour check, we recommend using polyethylene. The vapour check must be placed over the wooden battens, i.e. between the battens and the main beam. Install the vapour check tightly against the insulation.

Please refer to the manufacturer's instructions.

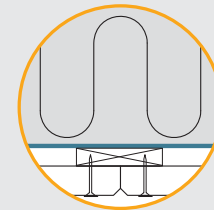

TROLDTEKT® SCREWS

Panel thickness (mm)	Panel length (mm)	Screw dimension (mm)	No. of screws (per panel)	Max. span (mm)
25	600	4,2x45	4	600
	1200		6	
	2000/4000		10	
35	600	4,2x55	4	600
	1200		6	
	2000/2400		10	



Troldekt structure screw for wood and steel, PH2